


TECHNICAL INFORMATION	TI-HMI-0002v100EN
VNC SERVER	


Type	HMI
Software version	All versions
Required options	Not required
Use	Fuji technical staff
Date	26/02/2016
Version	1.0.0
Author	xxxxxxxxxx
Revised	xxxxxxxxxx
Approved	xxxxxxxxxx
Languages	English

All types of the V9 series are equipped with VNC server function for remote monitoring and control of production from your tablet or PC.

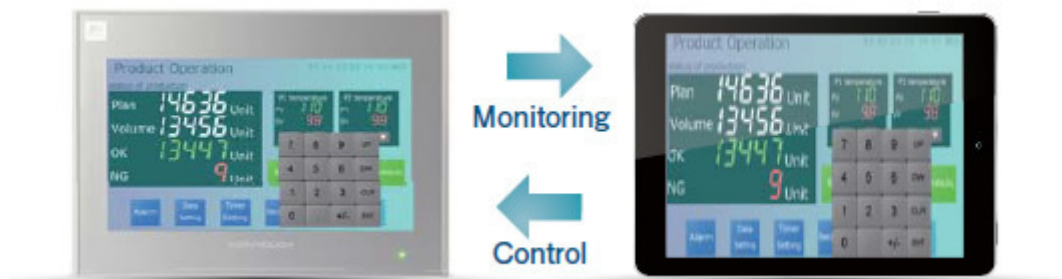


VNC Server function configuration in local network.

- 1- Configure one of the LAN ports of the V9 in the OS. Set the IP and the Mask in range with your local network . Then press the apply button for save changes.

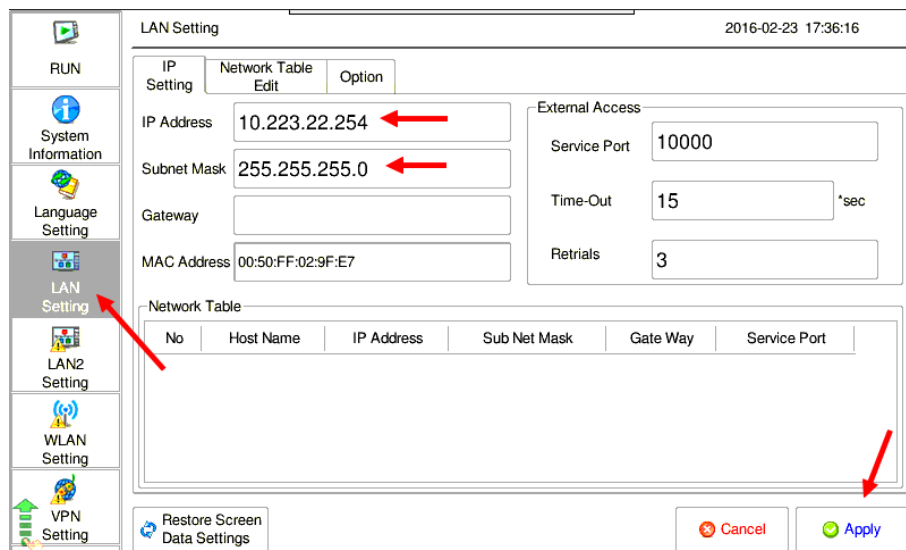

- 2- Dowload a VNC Client like"VNC VIEWER" and try to connect with the IP configured on the V9.

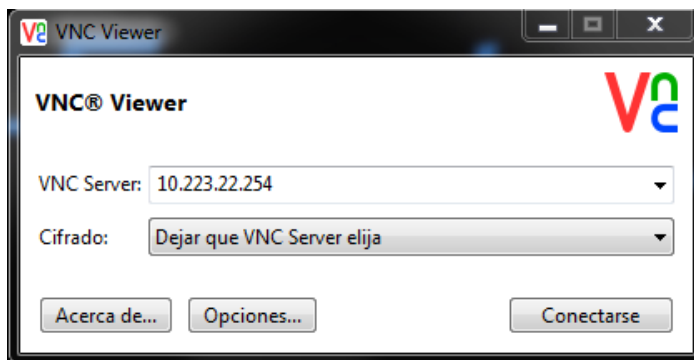

VNC Server function configuration through VPN

- 1- Please refer at "TI-V-Power Cloud-0001v100EN" Document for establish the VPN connection. Once established VPN connection, open VNC Client like "VNC VIEWER" and you can connect.

Document history.

Version	Changes applied	Date	Written	Revised	Approved