



## Communication Setting

### Interface

Module	Control	Option	Communication	
Series	TMH2/4	TMHA, TMHE, TMHCT	TMHC-22LE	TMHC-22EE
Protocol	Modbus RTU		Modbus RTU, PLC Ladderless communication	Modbus TCP
Comm. method	RS485		RS422, RS485	Ethernet (10/100BaseT)
Maximum connection	32 units (address: 01 to 32) • 16 units in case of connecting TMHC module (address: 01 to 16)	16 units per each module	Control module 16 units, option module 16 units per each module (32 units in total)	
Synchronization	Asynchronous			
Connection method	Two-wire half duplex			
Comm. effective range	≤ 800 m			
Comm. speed	4,800 / 9,600 (default) / 19,200 / 38,400 / 115,200 bps (parameter)			10/100 Mbps
Response time	5 to 99 ms (default: 20 ms)			
Start bit	1 bit (fixed)			
Data bit	8 bit (fixed)			
Parity bit	None (default), Odd, Even			
Stop bit	1 bit, 2 bit (default)			
EEPROM life cycle	• TMH2/4, TMHC-22LE: ≈ 1,000,000 operations (Erase / Write) • Other models: Not applicable			

- When changing the setting value related to communication interface, reboot the device for normal operation.
- It is recommended to use Autonics communication converter. Please use twisted pair wire, which is suitable for RS485 communication.

### Address

Set the communication address with the communication address setting switch (SW1, default: 1) and communication address group switch (SW2, default: +0, TMH2/4 series).

Series	SW1																
	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	
TMH2/4	+0 +16	16	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
TMHC	+0 +16	32	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
TMHA		16	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
TMHE		48	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
TMHCT		64	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
		80	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79

- When connecting TMHC and TMH2/4 to master separately, communication address can be duplicated, but if they communicate with master at the same time, communication address must not be duplicated to avoid error. (use address TMHC: 1 to 16, TMH2/4: 17 to 32)


### Mac address [Ethernet communication module]

It is possible to check Mac address for Ethernet communication at DAQMaster. Refer to the manual for the details.

### DIP switch setting [Ladderless communication module]

After separating base terminal block, set communication speed, stop bit, PLC connection and protocol by using a internal DIP switch.

- Setting values are applied to COM1 only, default: All switches OFF (following parameter setting)

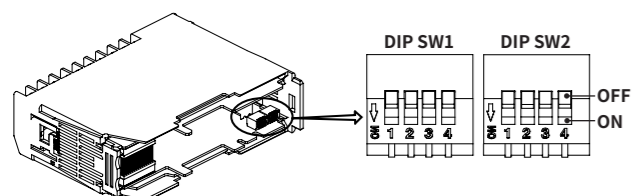


DIP SW1		3	4	Stop bit
1	2	Communication speed		
OFF	OFF	Following parameter setting	OFF	OFF
OFF	ON	19,200 bps	OFF	ON
ON	OFF	38,400 bps	ON	OFF
ON	ON	115,200 bps	ON	ON

DIP SW2				PLC connection and protocol
1	2	3	4	
OFF	OFF	OFF	OFF	Following parameter setting
OFF	OFF	OFF	ON	Modbus RTU
OFF	OFF	ON	OFF	LS MASTER-K series special protocol
OFF	OFF	ON	ON	LS GLOFA-GM series special protocol
OFF	ON	OFF	OFF	LS XGT/XGB series special protocol
OFF	ON	OFF	ON	MITSUBISHI MELSEC series special protocol Q/QnACPU common command (1401/0401)
OFF	ON	ON	OFF	MITSUBISHI MELSEC series special protocol ACPU common command (WW/WR)
OFF	ON	ON	ON	OMRON SYSMAC series special protocol
ON	OFF	OFF	OFF	MITSUBISHI MELSEC3 series special protocol

## Installation Method


### Separating base terminal block

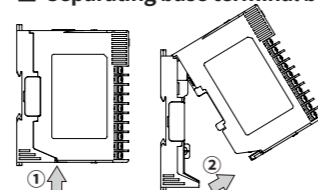

- Push the lock lever at ①.
- Pull the body of the module to ② direction.

- When connecting base terminal block, align the upper concave part (□) of the body and the upper convex part (△) of the base. If the upper parts are not align correctly, it may damage to the inner connector.


### Connection between modules

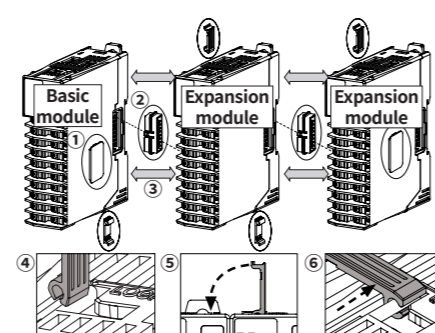

- Remove END cover (①) of each module (except END cover of the first and last module).
- ② Insert expansion connector (②) and connect them tightly to ③ direction (max. 31 units).
- Insert module lock connector (④) to lock connector hole (⑤).
- Push module lock connector to the lock direction (⑥).

- Supply adequate power for power input specifications and overall capacity. (Max. power when connecting 32 modules: 32 × 5 W = 160 W)


### Mounting with bolts

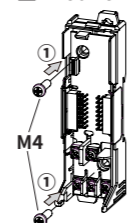


- Refer to 'Separating base terminal block' to separate base terminal block.
  - Install the module by using M4 screws to the ① direction of the inside mounting hole.
- Refer to the 'Dimensions' to check hole positions and dimensions of inside mounting hole.

### Mounting on DIN rail


#### - Installation

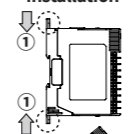

- Press the rail lock at the top / bottom of the module to the ① direction.



- Hang the top rail lock to DIN rail.
- Push to ① direction and press to ② direction.



#### - Separation

- Press the module to ① direction.
- Keep it pressed and pull it to ② direction.

### Precautions

- Install the module vertically.
- Use end plates (sold separately, not available from Autonics) to fix firmly.

## Error


Indicator	Description		Troubleshooting
Name	Status	Color	
PRW	ON	Red	□ channel error: Input value < Input range, Input value > Input range, Input sensor is open or not connected. When the error factor is resolved, it automatically returns to normal operation.
CH□	Flash	Red	

## Sold Separately


- Communication converter: SCM Series
- CT connector cable: CICT4-□
- Current transformer (CT)

## Connections


### Control module

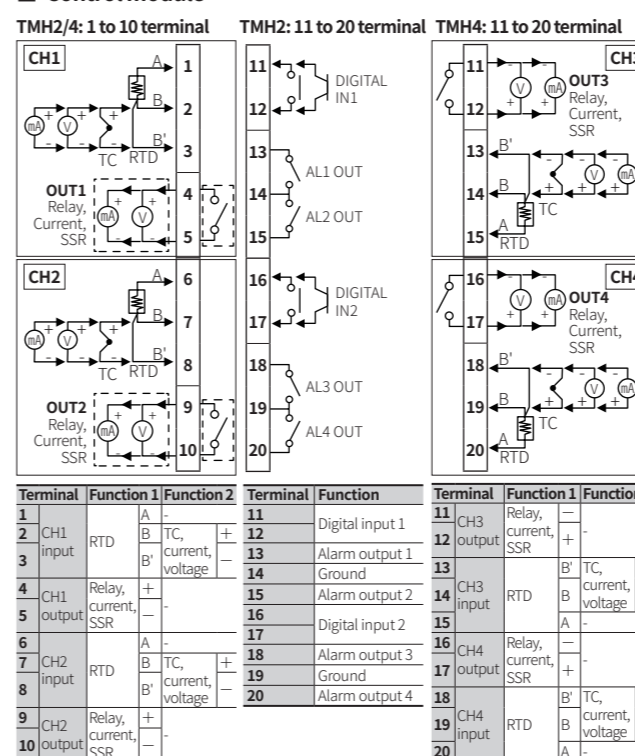

### CT input terminals on the top

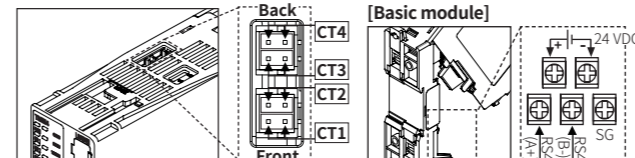

### Power/Comm. terminal on the back

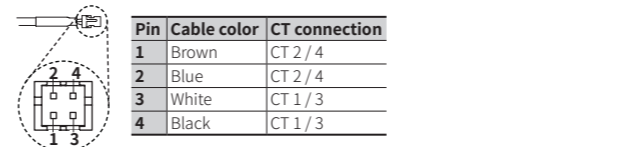

### Option module

